


- ✓ Available in 3 colours- Charcoal, Sandstone, and Natural Grey
- ✓ Never replace fence plinths again
- ✓ Fits most colourbond type fencing systems
- ✓ Reinforced concrete for superior strength

1 INSTALL YOUR FENCE POSTS


Install your fence posts as specified by the manufacturer. Outback Sleepers recommends that the post be extended and the hole dug a further 300mm deeper than the fence manufacturers recommendations.




2 REMOVE BOTTOM RAIL

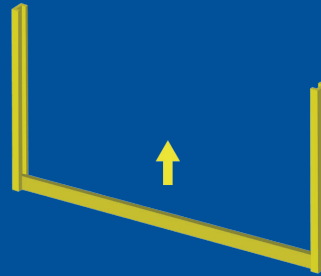


3 INSERT CONCRETE UNDER FENCE PLINTH INTO POSTS

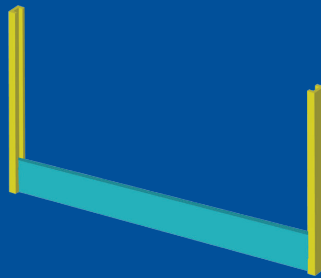

4 REPLACE BOTTOM RAIL AS PER FENCE MANUFACTURER'S INSTRUCTIONS

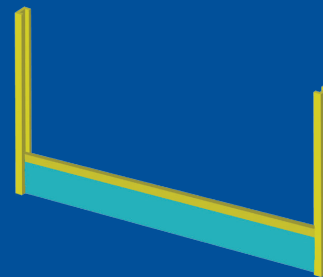


5 REPLACE FENCE PANEL AS PER FENCE MANUFACTURER'S INSTRUCTIONS

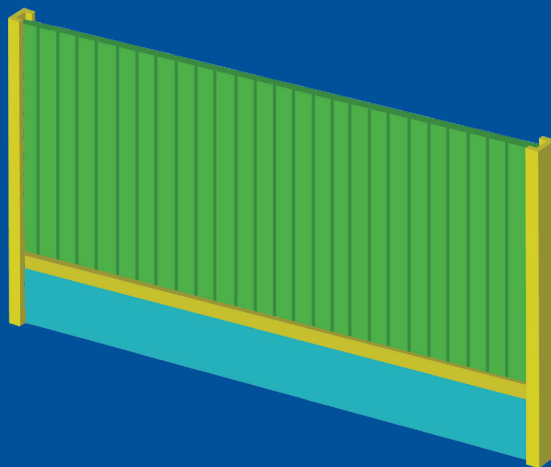

AVAILABLE IN:



SANDSTONE

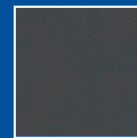

CHARCOAL



PLAIN GREY

*customer must confirm suitability of product use with fencing style being installed.